# Geiger Ward Bennett

### GEIGER

### Right ON SITE

Installation Principles


ROS-WBIB Ward Bennett I Beam Tables


1B862W

#### Parts List

Tools Required

- o Cordless Drill
- o Drill bits:
  - o #3 Phillips

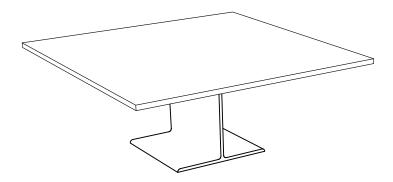

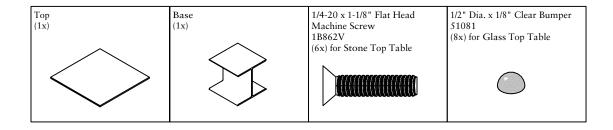

## Geiger Ward Bennett

**GEIGER** 

**Right** ON SITE


Installation Principles

ROS-WBIB Ward Bennett I Beam Tables

1B862W

#### 1a. Stone Top Table

Set base in final location. Place stone top with 3/4" subtop on base so that holes on subtop align with the holes on the base. Attach top to base with # 3 philips head drill bit using six machine screws (1B862V).

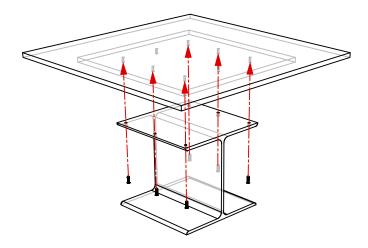

### 1b. Glass Top Table

Peel eight Clear bumpers (part 51081) from backer and place on base as shown below, about 1/2" in from base edges, aligning bumpers as neatly as possible. Place Glass Top on bumpers, centered over base

